



Thank You for your purchase from SynthGraphics!

TIPS: The 50/50 technique


1. Remove slider caps and pot knobs.
2. Do not try installing the overlay in one attempt/shot.
3. DO NOT remove sticky back protective sheet. Align the new overlay into place and tape it into position using blue painters tape.



4. Next remove the tape from the left side that held the overlay into place. Now pull back the left half of the protective sheet and gently apply the overlay.



5. Now remove the tape from the right side that held the overlay into place. Now pull back the right half of the protective sheet and gently apply the overlay.
6. If satisfied with alignment you can now firmly press the overlay down. The 3M adhesive will achieve full bond in 24-48hrs. It's OK to use your instrument, the overlay will not slip or move.

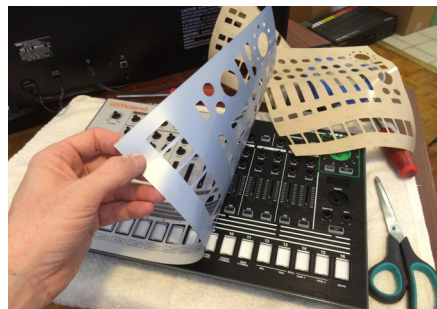

7. Reinstall slide caps and pot knobs.

Enjoy!

Jamie
www.SynthGraphics.com

Visit us on Facebook and post your photos www.facebook.com/synthgraphics